

UNIVERSAL WIRE EXTENSOMETER

NUMBERS : 70-74

INSTALLATION DETAILS

PILLAR _____

BEARING _____

R.L. _____

DATE : _____

LOCATION : _____

SENSITIVITY .0092 mm/unit change.

DATE	DAY	NO. 70			NO. 71			NO. 72			NO. 73			NO. 74		
		V _{x100}	ΔV _{x100}	mm	V ₁₀₀	ΔV ₁₀₀	mm									
1.8.83		91			148			138			73			62		
		-25	-116		-5	-153		12	-126		-59	-132		-196	-134	
9.8.83		-26			-12			10			-55			-196		
19.8.83		-31			-4			10			-56			-196		
30.8.83		-27			-4			11			-55			-196		
20.9.83		-26			-8			10			-55			-195		
11.10.83		-26			-2901			12			-49			-182		
27.10.83		-21	-112	-1.03	-108	-256	-2.35	13	-125	-1.15	-53	-20	-0.184	-182	-120	-1.104
8.11.83		-23			-3052			12			-54			-184		
24.11.83		-27			-1025			13			-52			-182		
5.12.83		-28			-3035			11			-53			-181		
10.4.84		-3122			-3122			-3122			-3122			-3122		
22.5.84		"			"			"			"			"		