

DEPTH	DIP			TOOL POSITION	
	ANGLE	AZIMUTH	BEARING	ANGLE	AZIMUTH
3591.0	9	186	S 6 W	3	0.
3600.0				0	0.
3664.0	7	180	SOUTH	3	0.
3700.0				0	0.
3709.5	9	184	S 4 W	3	0.
3727.0	5	181	S 1 W	3	0.
3739.0	5	196	S 16 W	3	0.
3753.5	5	201	S 21 W	3	0.
3780.7	4	251	S 71 W	3	0.
3781.5	6	148	S 32 E	3	0.
3785.0	5	188	S 8 W	2	0.
3793.0	1	221	S 41 W	3	0.
3800.0				0	0.
3804.5	7	201	S 21 W	2	0.
3827.2	11	240	S 60 W	2	0.
3828.7	11	240	S 60 W	2	0.
3837.0	7	205	S 25 W	2	0.
3852.5	2	191	S 11 W	3	0.
3863.0	4	242	S 62 W	3	0.
3900.0				0	0.
3930.7	12	191	S 11 W	3	0.
3942.0	11	202	S 22 W	3	0.
3948.0	3	181	S 1 W	3	0.
3970.5	4	221	S 41 W	2	0.
3979.5	9	171	S 9 E	2	0.

DEPTH	DIP			TOOL POSITION	
	ANGLE	AZIMUTH	BEARING	ANGLE	AZIMUTH
3986.0	9	191	S 11 W	2	0.
3993.0	2	181	S 1 W	2	0.